

**grüne LED leuchtet**

Eingehender Tür- oder Internruf > aktive Sprechverbindung. Bei aktiver Sprechverbindung kann mittels DTMF 7 der Türöffner ausgelöst werden.

**rote LED leuchtet**

Der Rufton ist deaktiviert, eingehende Tür- oder Internrufe werden nicht akustisch signalisiert.

**blaue LED leuchtet**

Die Tür ist geöffnet.

**grüne, rote und blaue LED leuchten**

Die Ruftonauswahl ist aktiviert.

**grüne, rote und blaue LED blitzen**

Fehleranzeige > Drücken einer beliebigen Taste löst einen Fehlerton aus. Das Gerät ist nicht betriebsbereit. Fehlerbehebung durch Ihre Elektrofachkraft.

**Ambientebeleuchtung leuchtet**

manuell deaktivierbar und aktivierbar (Werkseinstellung > EIN)

**Ambientebeleuchtung blinkt**

Anzeige des Türruf, durch die Elektrofachkraft deaktivierbar.


**BEDIENUNGSANLEITUNG**

**Serie TASTA**

IP-Video-Innenstation zum Freisprechen  
IWW5411-0145

Deutsch / Englisch

**GERÄTEÜBERSICHT**

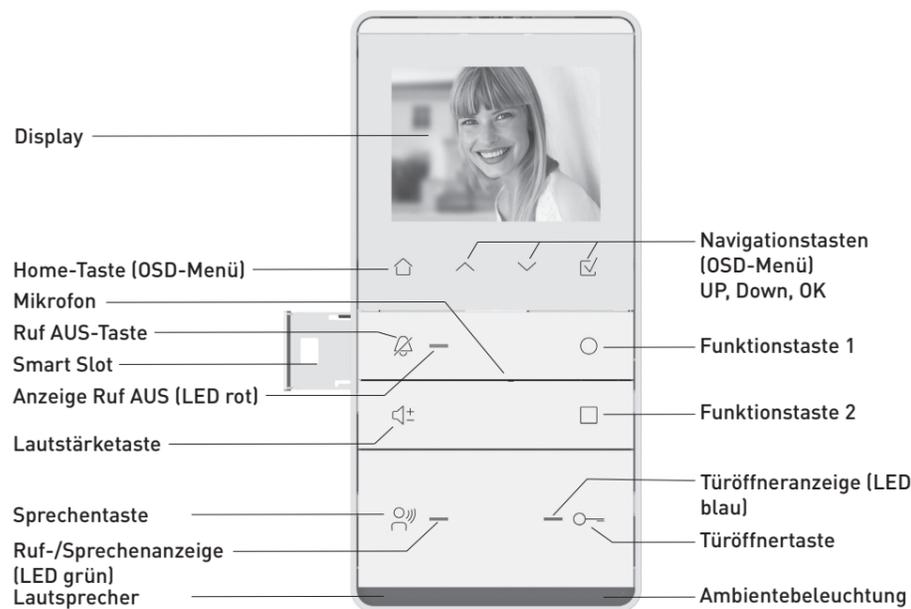

**ÜBERSICHT BILDSCHIRM**



**BEDIENELEMENTE**

**SmartSlot**

Schnittstelle für zusätzliche Funktionserweiterungen (z.B. Funkgong). Sprechen Sie mit Ihrem Elektrofachmann.



**Ruf-AUS-Taste**

> Rufton abschalten  
> 8 Sekunden lang drücken: Ruftonauswahl einleiten/ beenden



**Lautstärketaste**

> Ruftonlautstärke in 4 Stufen einstellbar, wenn keine Sprechverbindung besteht.  
> Gesprächslautstärke in 4 Stufen einstellbar, wenn eine Sprechverbindung besteht.



**Sprechentaste**

> Gespräch annehmen und beenden  
> Ruftonauswahl für SIP-Adressgruppe 2  
> in Ruhe: Aufrufen von SIP-Kontakten



**Funktionstaste 1\***

> SIP-Ruf 1 zu anderen Innenstationen o. Concierge  
> Action URL  
> Ruftonauswahl für SIP-Adressgruppe 1



**Funktionstaste 2\***

> SIP-Ruf 2  
> Action URL  
> DTMF (bei aktiver Sprechverbindung)  
> senden HTTP-request (im Ruhemodus)  
> Ruftonauswahl für Etagenruf



**Türöffnertaste\***

> Tür öffnen  
> Action URL  
> Ruftonauswahl für unbekannte SIP-Adresse  
> Taste kurz drücken, die Sprechverbindung wird nach 4 s beendet



**Navigationstasten**

> Wechseln zwischen verschiedenen Kameras  
> Navigation durch das Menü  
> Anpassen der Menüpunkte



**OK-Taste**

> Auswahl im Menü bestätigen



**Home-Taste**

> Hauptmenü öffnen  
> Videobild aufschalten

**BEDIENUNG**

**Türruf oder SIP-Ruf annehmen**

Ein Rufton und das Leuchten der grünen LED signalisieren einen Ruf. Drücken Sie kurz die *Sprechentaste*, um das Gespräch anzunehmen. Dritte können das Gespräch nicht mithören. Drücken Sie erneut kurz die *Sprechentaste*, um das Gespräch zu beenden. Drücken Sie alternativ die *Türöffnertaste*, der Türöffner wird ausgelöst und das Gespräch wird nach 4 Sekunden beendet. Eine automatische Gesprächsabschaltung erfolgt nach 2 Minuten.

**Ruf auslösen über Funktionstasten\***

Drücken Sie eine der *Funktionstasten*, um eine andere Innenstation zu rufen.

**Ruf auslösen über Kontaktliste**

Öffnen Sie das Hauptmenü, siehe *Hauptmenü öffnen*. Öffnen Sie das Menü *Kontaktliste*. Wählen Sie mit den *Navigationstasten* einen Kontakt aus und bestätigen Sie mit der *OK-Taste*. Eine Verbindung zum gewählten Kontakt wird aufgebaut.

**Tür öffnen**

Drücken Sie kurz die *Türöffnertaste*, um die Tür zu öffnen. Die blaue LED leuchtet. Das Gespräch wird nach 4 Sekunden automatisch beendet.

**Rufton abschalten**

Drücken Sie kurz die *Ruf-AUS-Taste*. Der Rufton ist deaktiviert und die rote LED leuchtet. Bei einem eingehenden Ruf ertönt kein akustisches Signal. Drücken Sie die *Ruf-AUS-Taste* erneut. Der Rufton ist wieder aktiviert und die rote LED leuchtet nicht.

**Videobild aufrufen**

Tippen Sie kurz auf die *Home-Taste*. Das Videobild der Außenstation wird aufgerufen. Tippen Sie auf die *Navigationstasten*, um ggf. weitere Videobilder verschiedener Außenstationen aufzurufen.

**Zusätzliche Funktionen auslösen via Funktionstasten**

Drücken Sie die *Funktionstasten 1* oder *2*, um mittels Action URL zusätzliche Schaltfunktionen auszulösen.\*

**BENUTZEREINSTELLUNGEN**

**Gesprächslautstärke**

Die Gesprächslautstärke ist während einer bestehenden Sprechverbindung in 4 Stufen veränderbar. Drücken Sie wiederholt die *Lautstärketaste* bis Sie die gewünschte Gesprächslautstärke eingestellt haben.

**Ruftonlautstärke**

Die Ruftonlautstärke ist in 4 Stufen veränderbar. Es darf keine Sprechverbindung bestehen. Drücken Sie wiederholt die *Lautstärketaste*. Der Rufton wird in aktueller Ruftonlautstärke wiedergegeben.

**Rufton auswählen**

Für Etagenruf, bekannten und unbekannter SIP-Ruf können Sie verschiedene Ruftöne auswählen.

**Ruftonauswahl aktivieren:**

Halten Sie die *Ruf-AUS-Taste* für 8 Sekunden gedrückt, wenn keine Sprechverbindung besteht. Ein Bestätigungston ist zu hören und alle LEDs leuchten. Die Ruftonauswahl ist aktiviert...

**Rufton Etagentür**

...Drücken Sie wiederholt die *Funktionstaste 2* zum Auswählen der Ruftöne. Der zuletzt ausgewählte Rufton ist jetzt gespeichert.

**Rufton SIP-Adressgruppe 1\***

...Drücken Sie wiederholt die *Funktionstaste 1*, bis der gewünschte Rufton ertönt. Der zuletzt ausgewählte Rufton ist jetzt gespeichert.

**Rufton SIP-Adressgruppe 2\***

...Drücken Sie wiederholt die *Funktionstaste 2*, bis der gewünschte Rufton ertönt. Der zuletzt ausgewählte Rufton ist jetzt gespeichert.

**Rufton unbekannte SIP-Rufe\***

...Drücken Sie wiederholt die *Türöffnertaste* zum Auswählen der Ruftöne. Der zuletzt ausgewählte Rufton ist jetzt gespeichert.

**Ruftonauswahl beenden**

Drücken Sie einmal kurz die *Ruf-AUS-Taste*. Ein Bestätigungston ist zu hören und die LEDs leuchten nicht mehr. Die Ruftonauswahl ist jetzt beendet. Wird für 8 Sekunden keine Taste mehr gedrückt, beendet das Gerät die Ruftonauswahl automatisch.

**Hauptmenü öffnen**

Tippen Sie einmal auf die *Home-Taste*. Das Videobild der Außenstation wird angezeigt. Tippen Sie erneut auf die *Home-Taste*. Das Hauptmenü wird aufgerufen.

**Sprache einstellen**

Wählen Sie im Hauptmenü das Menü *Sprache* aus. Wählen Sie mit den *Navigationstasten* Ihre Sprache aus und Bestätigen Sie Ihre Auswahl mit der *OK-Taste*.

**Helligkeit und Kontrast**

Im Menü *Videoeinstellungen* können Sie die Helligkeit und den Kontrast des Videobildes einstellen.

**Audio Einstellungen**

Im Menü *Audio Einstellungen* können Sie die Ruftöne, die Ruftonlautstärke, die Gesprächslautstärke und die Mikrofonlautstärke einstellen.

**Anrufliste**

Im Menü *Anrufliste* werden Ihnen angenommene und verpasste Rufe, sowie das Anrufer-Bild angezeigt. Wählen Sie mit den *Navigationstasten* einen Kontakt aus der Anrufliste aus. Tippen Sie auf die *OK-Taste*, um den Kontakt aus der Liste zu löschen.

**Ambientebeleuchtung**

Halten Sie die *Funktionstaste 2* für länger als 3 Sekunden gedrückt. Die Ambientebeleuchtung ist aktiviert und leuchtet blau. Drücken Sie die *Funktionstaste 2* erneut für länger als 3 Sekunden. Die Ambientebeleuchtung ist deaktiviert, sofern diese Funktion von Ihrem Elektrofachmann nicht gesperrt wurde.

**Zusatzfunktionen\***

Wenn weitere Funktionen konfiguriert wurden, können Sie diese mit der *Funktionstaste 1* oder *Funktionstaste 2* auslösen.

**HINWEISE**

**Gewährleistung**

Wir bieten eine vereinfachte Abwicklung von Gewährleistungsfällen an. Unsere Verkaufs- und Lieferbedingungen finden Sie unter [www.tcsag.de](http://www.tcsag.de) und in unserem aktuellen Katalog. Wenden Sie sich direkt an Ihren Elektrofachmann.

**Service**

Die Gewährleistung erfolgt entsprechend den gesetzlichen Bestimmungen. Der Austausch des Gerätes im Fehlerfall muss durch Ihren Elektrofachmann erfolgen.

**Reinigen**

Reinigen Sie das Türtelefon mit einem trockenen oder angefeuchteten Tuch. Stärkere Verschmutzungen entfernen Sie mit Haushalts-Kunststoffreiniger. Vermeiden Sie das Eindringen von Wasser in das Gerät! Verwenden Sie keine aggressiven Reinigungsmittel!

**Entsorgung**

Das Gerät ist getrennt vom Hausmüll zu entsorgen. Die verwendeten Materialien sind recyclebar. Bitte leisten Sie einen Beitrag zum Schutz unserer Umwelt und entsorgen Sie das Gerät über eine Sammelstelle für Elektronikschrott.

**HOTLINE**

Telefon 04194 9881-188  
E-Mail [hotline@tcsag.de](mailto:hotline@tcsag.de)

TCS TürControlSysteme AG  
Geschwister-Scholl-Straße 7  
D-39307 Genthin

TCS Österreich GmbH  
Gewerbepark 21  
A-2821 Lanzenkirchen

**Green LED is ON**

Incoming door or internal call > active voice connection. When an active voice connection is established the door opener can be triggered via DTMF 7.

**Red LED is ON**

The ring tone is deactivated, incoming door calls or internal calls are not signalled acoustically.

**Blue LED is ON**

The door is open.

**Green, red and blue LED are ON**

The ring tone selection is activated.

**Green, red and blue LED are flashing**

Error indication > Pressing any button triggers an error tone. The device is not ready for operation. For troubleshooting please contact your qualified electrician.

**Ambient illumination is ON**

Can be (de)activated manually (ex works > ON)

**Ambient illumination blinks**

Indication of a door call > can be deactivated by a qualified electrician.




**USER MANUAL**

**Series TASTA**


IP video indoor station for hands-free talking  
IWW5411-0145

German / English

**DEVICE OVERVIEW**

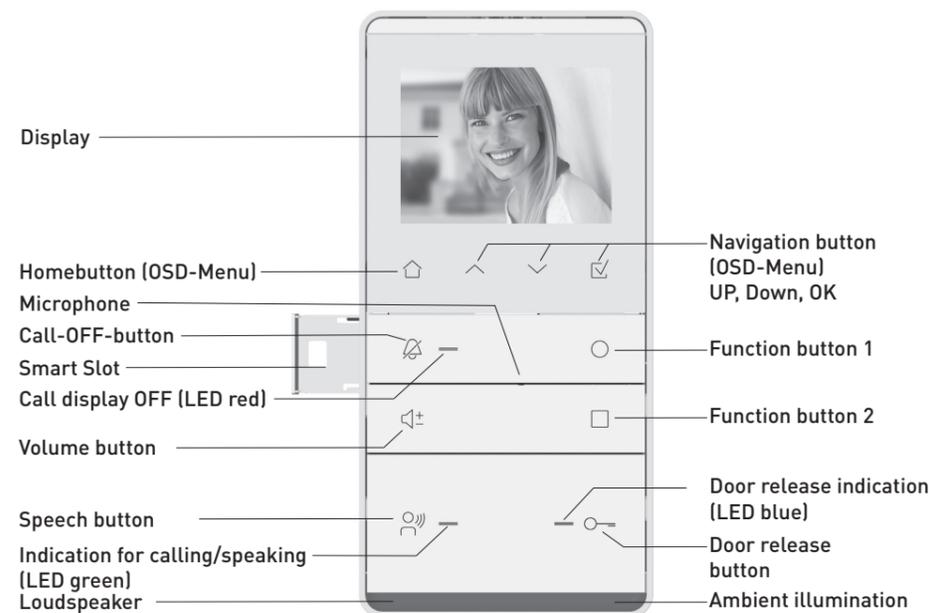

**SCREEN OVERVIEW**

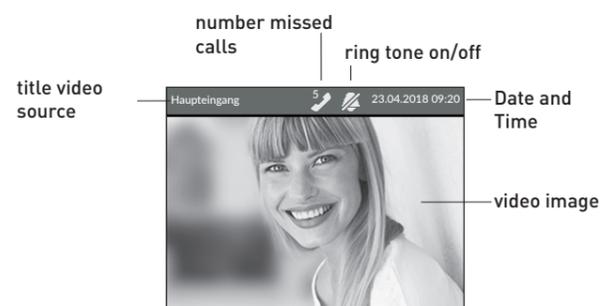

**OPERATING ELEMENTS**

**SmartSlot**

Interface for additional functional extensions (e.g. radio gong). Contact your qualified electrician.

 **Call-OFF button**

- > Switch off the ring tone
- > Press for 8 sec: initiate / quit the ring tone selection

 **Volume button**

- > Ring tone volume can be adjusted in 4 steps, if no voice connection is established.
- > Volume voice output can be adjusted in 4 steps, during an established voice connection.

 **Speech button**

- > Accept and terminate a call
- > Ring tone selection for SIP address group 2
- > In stand-by mode: call SIP contacts

 **Function button 1\***

- > SIP call 1 to other indoor stations or concierge
- > Action URL
- > Ring tone selection for SIP address group 1

 **Function button 2 \***

- > SIP call 2
- > Action URL
- > DTMF (with active voice connection)
- > Send HTTP request (in stand-by mode)
- > Ring tone selection for SIP address group 2

 **Door release button**

- > Door release
- > Action URL
- > Ring tone selection for unknown SIP address
- > Shortly press the button, the voice connection is terminated after 4 sec

 **Navigation buttons**

- > Switch-over between different cameras
- > Menu navigation
- > Change menu items

 **OK button**

- > Confirm a selection in the menu

 **Home button**

- > Call up the main menu
- > Display the video image

**OPERATION**

**Accept a door call or SIP call**

A ring tone as well as the green LED, that lights up, are signalling an incoming call. Shortly press the *Speech button* to accept the call. Third parties cannot listen in to conversations. Shortly press the *Speech button* again to quit the conversation. Alternatively press the *Door release button*, the door opener is triggered and the voice connection is terminated automatically after 4 seconds. The call is terminated automatically after 2 minutes.

**Trigger a call using the function buttons\***

Press one of the *Function buttons* to call another indoor station.

**Trigger a call via the contact list**

Call up the main menu, see *Call up the main menu*. Call up the menu *Contact list*. Select a contact with the *Navigation buttons* and confirm with the *OK button*. A connection to the selected contact is established.

**Door release**

Shortly press the *Door release button* to open the door. The blue LED is ON. The conversation is terminated automatically after 4 seconds.

**Ring tone mute**

Shortly press the *Call-OFF button*. The ring tone is deactivated and the red LED is ON. In case of an incoming call NO acoustic signal sounds. Press the *Call-OFF button* again. The ring tone activated again and the red LED is OFF.

**Display the video image**

Shortly press the *Home button*. The video image of the front door station is displayed. Press the *Navigation button* to switch over between several video images of different front door stations.

**Trigger additional functions via the function buttons**

Press the *Function buttons* 1 or 2 to trigger additional switching functions via Action URL.\*

**USER SETTINGS**

**Volume voice output**

The volume voice output can be adjusted in 4 steps during an established voice connection. Repeatedly press the *Volume button* until you have adjusted the required volume for the voice output.

**Ring tone volume**

The ring tone volume can be adjusted in 4 steps. Ensure that NO voice connection is established. Repeatedly press the *Volume button*. The ring tone sounds in the adjusted volume.

**Ring tone selection**

Different ring tones can be adjusted for floor calls, known and unknown SIP calls.

*Activate the ring tone selection:*

Keep the *Call-OFF button* pressed for 8 seconds, when NO voice connection is established. An acknowledgement tone sounds and all LEDs are ON. The ring tone selection is activated...

*Ring tone for floor door*

...Repeatedly press the *Function button 2* to select the ring tones. The ring tone selected last is stored.

*Ring tone for SIP-Adressgroup 1\**

...Repeatedly press the *Function button 1* until the required ring tone sounds. The ring tone selected last is stored.

*Ring tone for SIP-Adressgroup 2\**

...Repeatedly press the *Function button 2* until the required ring tone sounds. The ring tone selected last is stored..

*Ring tone for unknown SIP-Call*

...Repeatedly press the *Door release button* to select the ring tone. The ring tone selected last is stored.

*Ring tone for unknown SIP calls\**

...Repeatedly press the *Door release button* to select the ring tones. The ring tone selected last is stored.

*Quit the ring tone selection*

Shortly press once the *Call-OFF button*. An acknowledgement tone sounds and the LEDs are OFF. The ring tone selection is deactivated. If no button is pressed for 8 seconds the device ends the ring tone selection automatically.

**Call up the main menu**

Press the *Home button* once. The video image of the front door station is displayed. Press the *Home button* again. The main menu is called up.

**Select the language**

Select the menu item *Language* in the main menu. Select your language with the *Navigation buttons* and confirm your selection with the *OK button*.

**Brightness and contrast**

In the menu item *Video settings* you can adjust brightness and contrast of the video image.

**Audio settings**

In the menu item *Audio settings* you can adjust the ring tones, ring tone volume, volume voice output as well as the microphone volume.

**Call list**

In the menu item *Call list* accepted and missed calls are displayed as well as the image of the caller resp. called contact. Select a contact with the *Navigation buttons* from the call list. Press the *OK button* to delete the contact in the list.

**Ambient illumination**

Keep the *Function button 2* pressed for more than 3 seconds. The ambient illumination is activated and lights up blue. Keep the *Function button 2* again pressed for more than 3 seconds. The ambient illumination is deactivated, as far as this function was not blocked from by your qualified electrician.

**Additional functions\***

If further functions were configured, you can trigger these function with the *Function button 1* or *Function button 2*.

**NOTES**

**Warranty**

We offer a simplified processing in case of warranty. Note our conditions of sale and delivery, available under [www.tcsag.de](http://www.tcsag.de) and in our current catalogue. Please contact your qualified electrician.

**Service**

The warranty is granted in accordance to the current legal conditions. Removing the device in case of a fault has to be executed by your qualified electrician.

**Cleaning**

Clean the device with a dry or slightly wet cloth. Remove stronger stains with a mild household cleaner. Avoid water from entering the device! Do not use any abrasive detergents!

**Information on disposal**

Dispose the device separately from domestic waste via a collection point for electronic scrap. The packaging is recyclable. Dispose the parts of the packaging in collecting tanks for cardboard and paper.

**HOTLINE**

Fon +49 4194 9881-188  
E-Mail [hotline@tcsag.de](mailto:hotline@tcsag.de)

TCS TürControlSysteme AG  
Geschwister-Scholl-Straße 7  
D-39307 Genthin  
GERMANY

TCS Österreich GmbH  
Gewerbepark 21  
A-2821 Lanzenkirchen